



MX95

EN




MX96



MX97


USER'S AND INSTALLER'S MANUAL

 Motorline
PROFESSIONAL

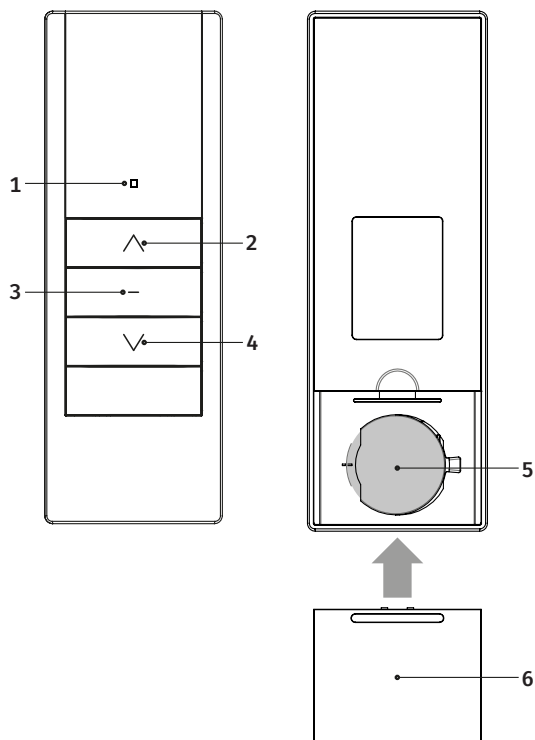


1	Channel	5	Battery
2	Up/Open	6	Cover
3	OK/Stop		
4	Down/Close		

 - 1 Channel's remote control (Rolling Code)
- Power Supply with 3V's battery (CR2430)
 - Operating temperature
- Transmission's frequency of 433,92MHz.

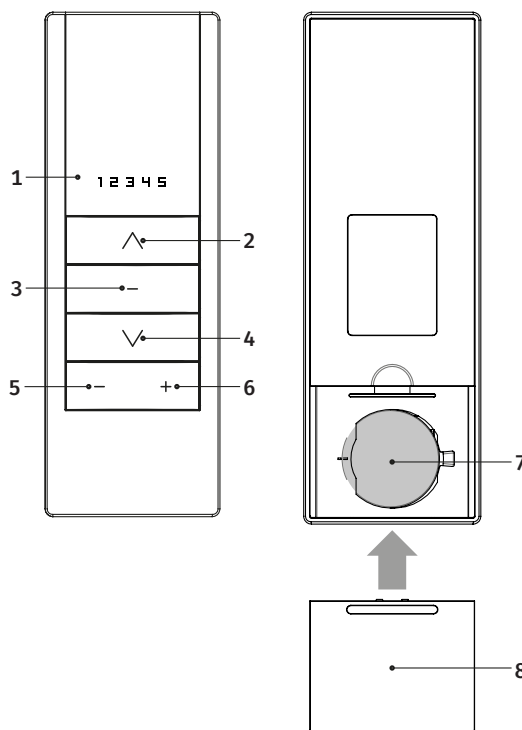

1	Channel	5	Navigation by channels
2	Up/Open	6	Navigation by channels
3	OK/Stop	7	Battery
4	Down/Close	8	Cover

 - 5 Channels remote control (Rolling Code)
- Power Supply with 3V's battery (CR2430)
 - Operating temperature
- Transmission's frequency of 433,92MHz.

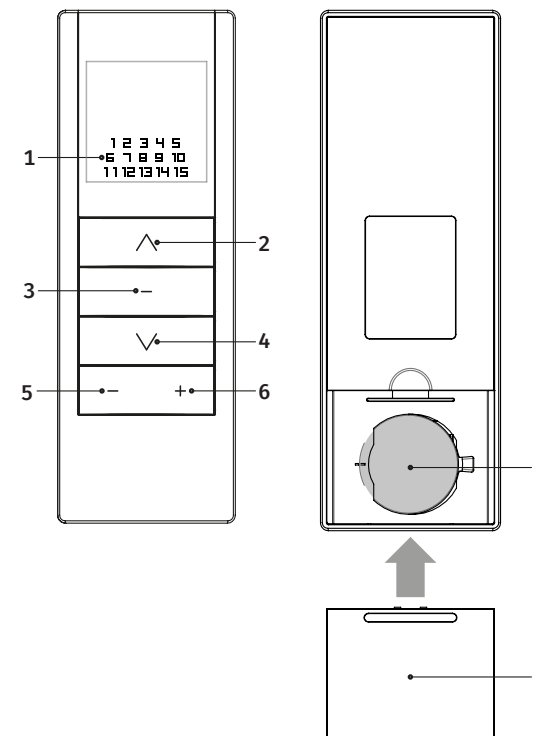

1	Channel	5	Navigation by channels
2	Up/Open	6	Navigation by channels
3	OK/Stop	7	Battery
4	Down/Close	8	Cover

- 15 Channel's remote control (Rolling Code)
- Power Supply with 3V's battery (CR2430)
 - Operating temperature
- Transmission's frequency of 433,92MHz.



Eliminação correta deste produto (Lixo de equipamentos elétricos e eletrônicos).